


LOCATING YOUR PROPERTY PINS

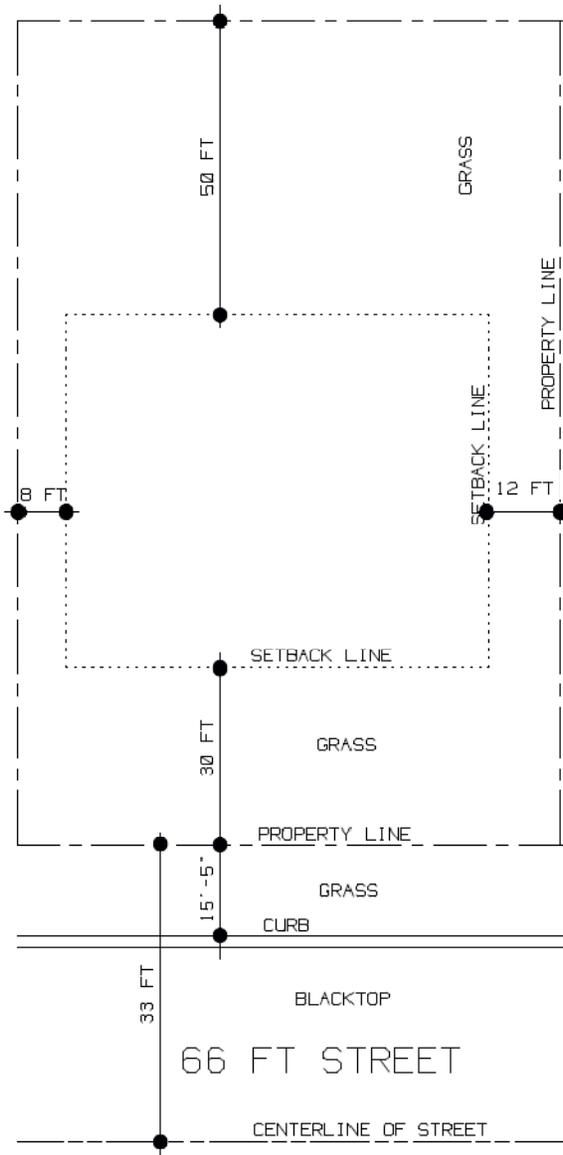

1. Find the center of the street in front of your property. (Carefully!)
2. Measure from that point $\frac{1}{2}$ the width of the street (usually 33 ft) toward your property.
3. This point is where your front property line is located.
4. Measure from the center of the nearest adjacent street, $\frac{1}{2}$ the width of the street toward your property.
5. Measure from that point the width of each lot along the front of each property, until you reach your property line.
6. The spot where the two measurements (front and side) intersect should be the location of a front property corner pin.
7. Dig in that spot and you should be able to expose the metal pin, usually a $\frac{3}{4}$ " iron pipe buried in the ground. Be careful not to disturb or remove the pin. State law requires that if a person disturbs or removes a property pin, it must be replaced by a licensed surveyor, which may prove to be costly.
8. You can now measure from the pin you have found to the other three (or more) pins on the property. Using the dimensions on your property plat, you can now mark the approximate location of the property lines.